
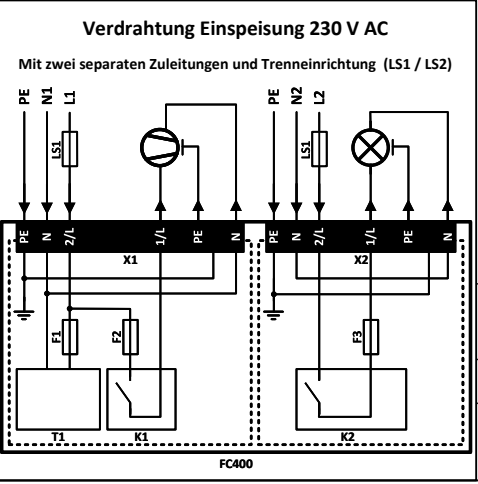
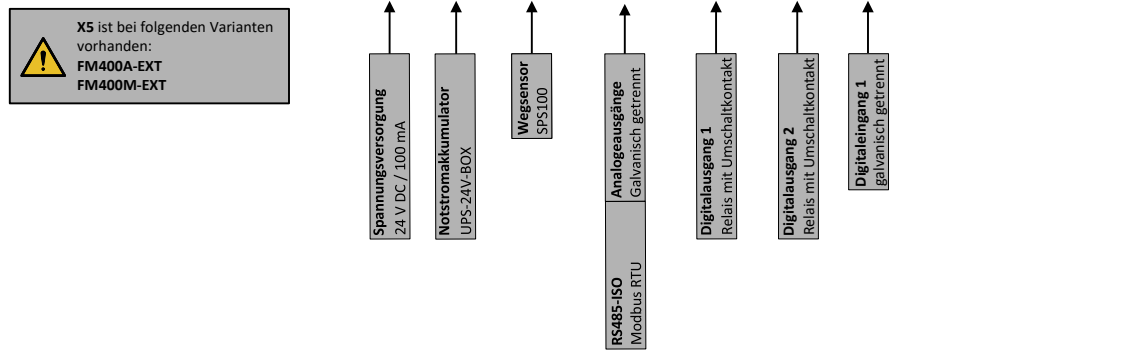


X3 / X4 	(X3) Funktionsanzeige 1 Peripheriebus (X4) Funktionsanzeige 2 Peripheriebus
X5 	Spannungsversorgung 24 V DC / 1 A / 24 W
X6 	Versorgungsspannung für externe Peripherie 24 V DC / 100 mA
X7 	Notstromakkumulator UPS-24V-BOX
X8 	Wegsensor SPS100
X9 	Analogausgang galvanisch getrennt
X9 	JP1 RS485 ohne Abschlusswiderstand „Standard“ JP1 RS485 mit Abschlusswiderstand ohne Vorspannung JP1 RS485 mit Abschlusswiderstand und Vorspannung
X10 / X11 	Beschaltung interner Relaiskontakte Max.: 24 V AC 24 V DC 3 A
X12 	SW1 ON DIN Beschaltung durch externen spannungsfreien Kontakt (Relais) – Standard OFF DIN Beschaltung durch externe Spannung 24V AC/DC
X14 	Serviceschnittstelle USF100

Inbetriebnahmeanweisung:

- Die Montage und Verdrahtung darf nur durch geschulte Fachkräfte erfolgen.
- Bei Montage, Verdrahtung und Inbetriebnahme sind die anerkannten Regeln der Technik, insbesondere die Sicherheits- und Unfallverhütungsvorschriften zu beachten.
- Montage- und Bedienungsanleitung unbedingt beachten.

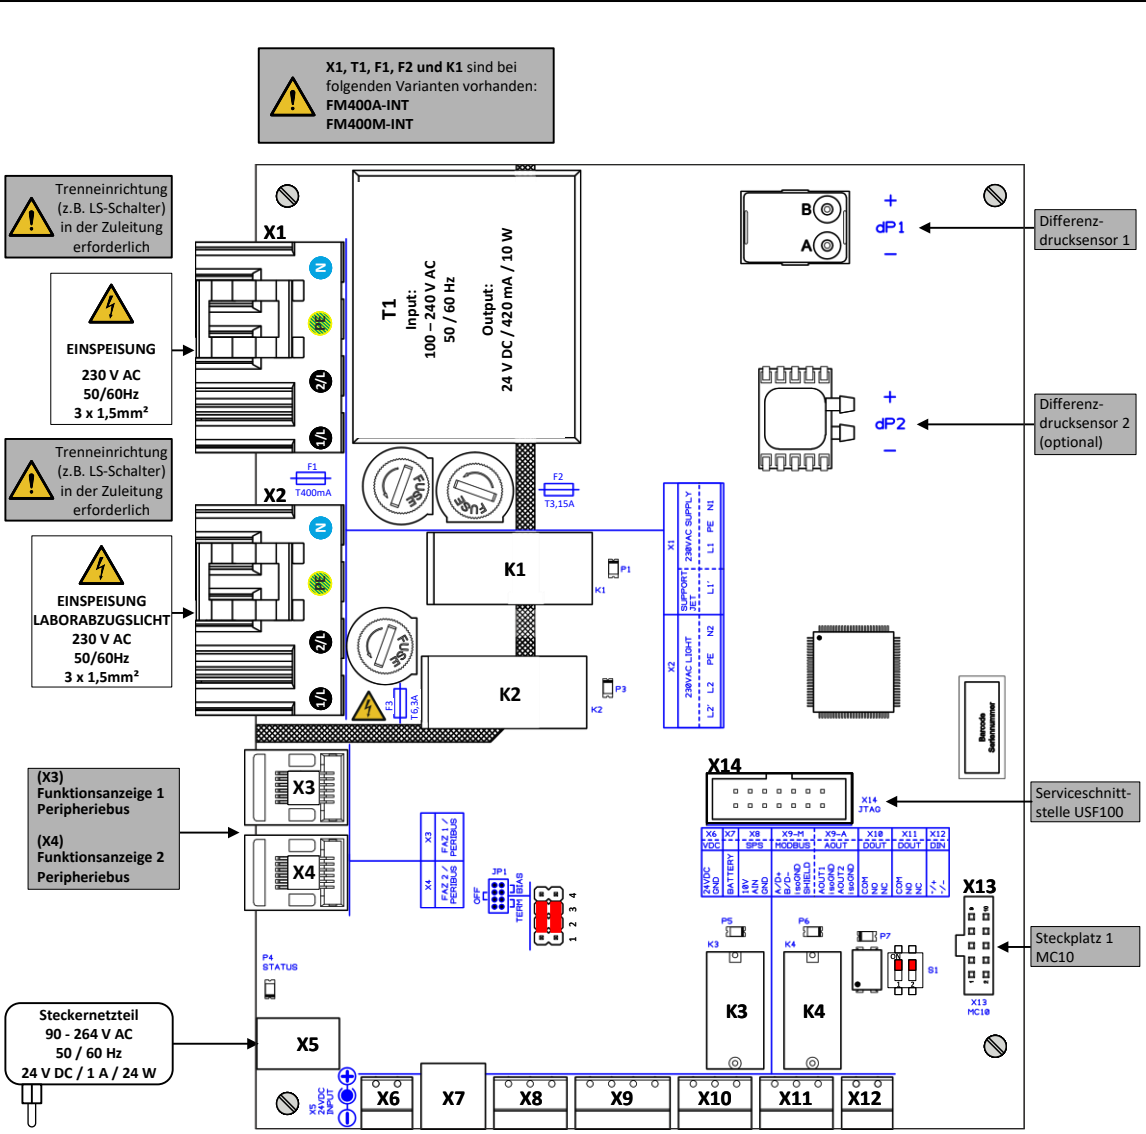

LABORABZUGSÜBERWACHUNG nach DIN EN 14175		
Klemmenplan, komplett		FM400
SCHAKO Group	Rev.: 1.4	Datum: 2025-11-24

X3 / X4 	(X3) Function display 1 Peripheral bus (X4) Function display 2 Peripheral bus
X5 	Power supply 24 V DC / 1 A / 24 W
X6 	Power supply for external Peripherie 24 V DC / 100 mA
X7 	Backup battery UPS-24V-BOX
X8 	Sash position sensor SPS100
X9 	Analog output galvanically isolated
X9 	JP1 RS-485 without terminator DEFAULT SETTING JP1 RS-485 with terminator (120Ω) without bias voltage JP1 RS-485 with terminator (120Ω) and bias voltage
X10 / X11 	Internal relay contact Max.: 24 V AC 24 V DC 3 A
X12 	SW1 ON  For use with external potential-free contact (Relay) DEFAULT SETTING SW1 OFF  For use with external power supply (24 V AC / DC)
X14 	Service interface USF100


Commissioning Instruction:

– The assembly and wiring may only be carried out by trained technician.

– In the case of assembly, wiring and commissioning, the recognized rules of technology, in particular the safety and accident prevention regulations must be observed.

– Observe assembly and operating instructions.

