Terminal Diagram FC400M-INT

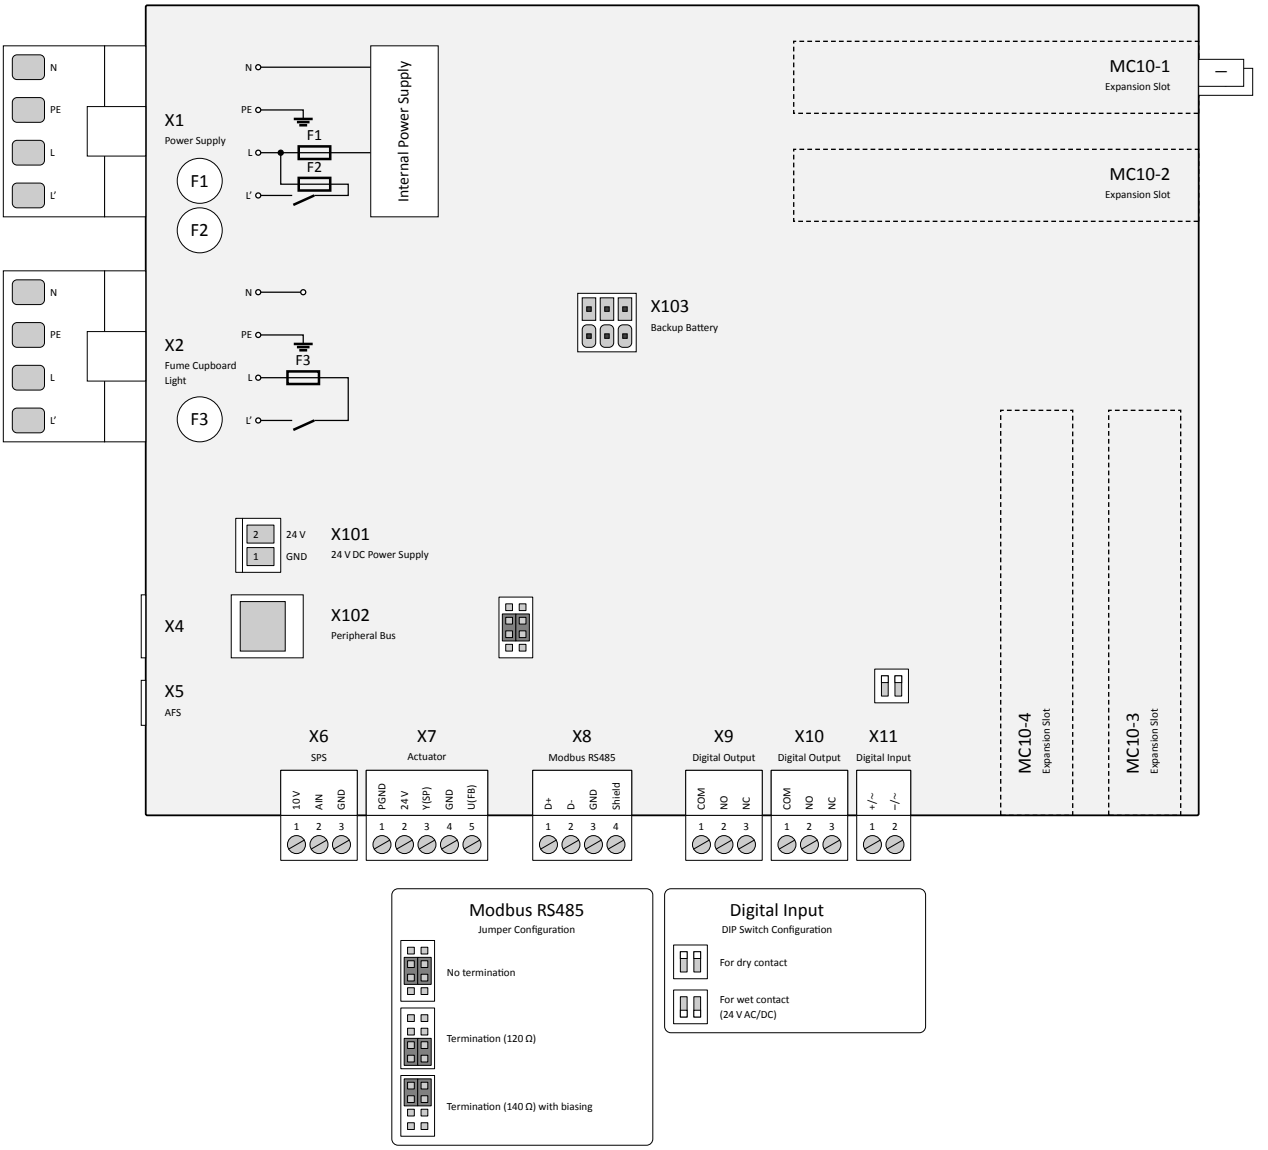

Terminal Diagram FC400M-EXT

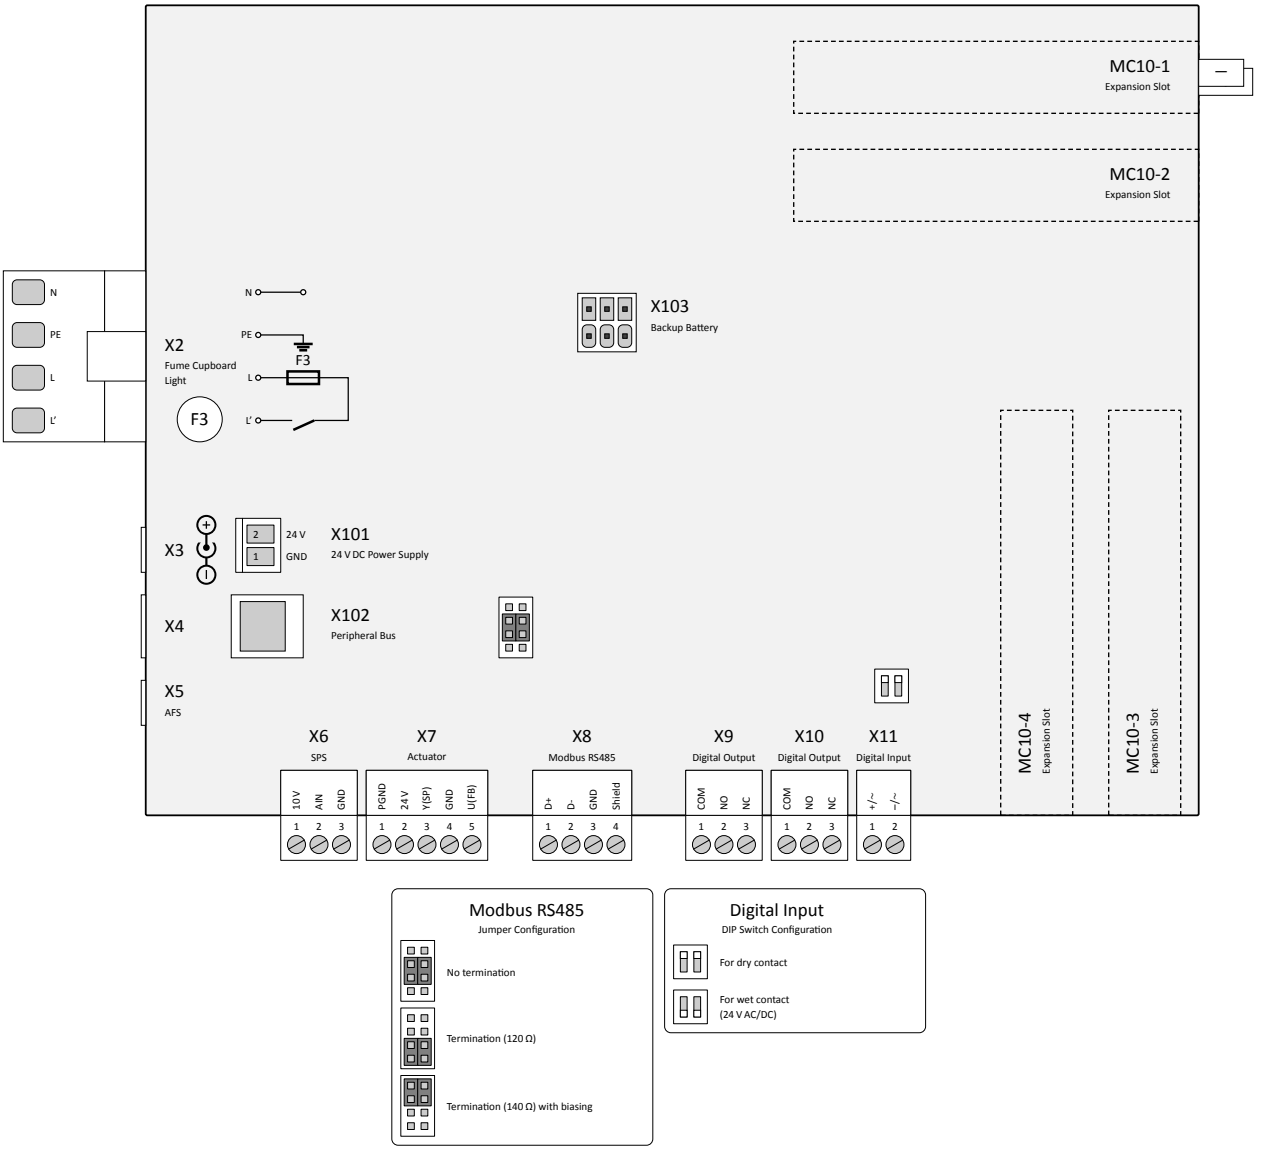

Terminal Diagram FC400A-INT

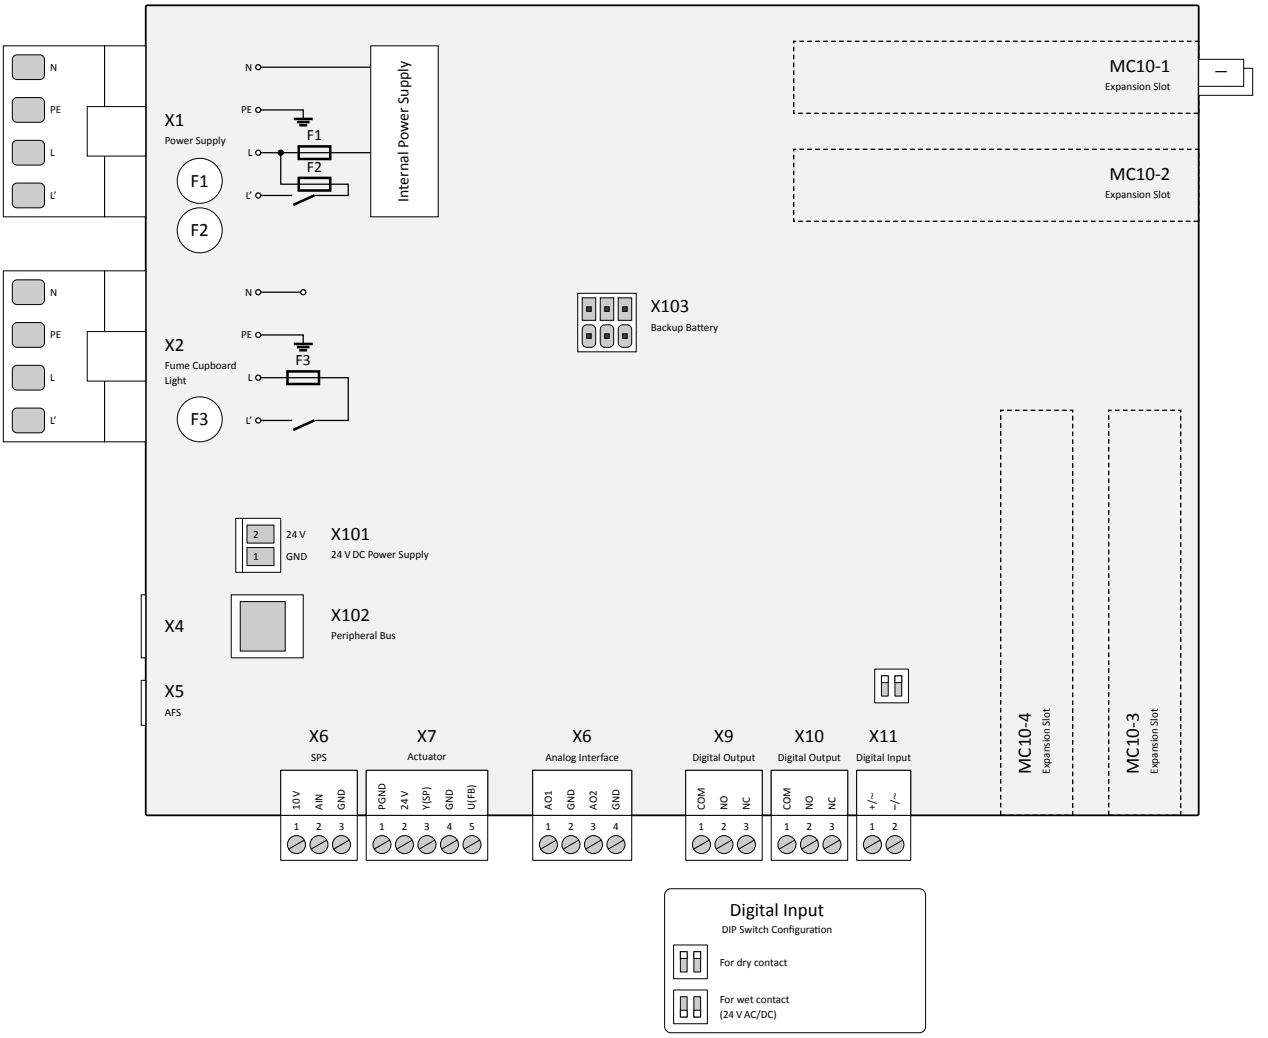
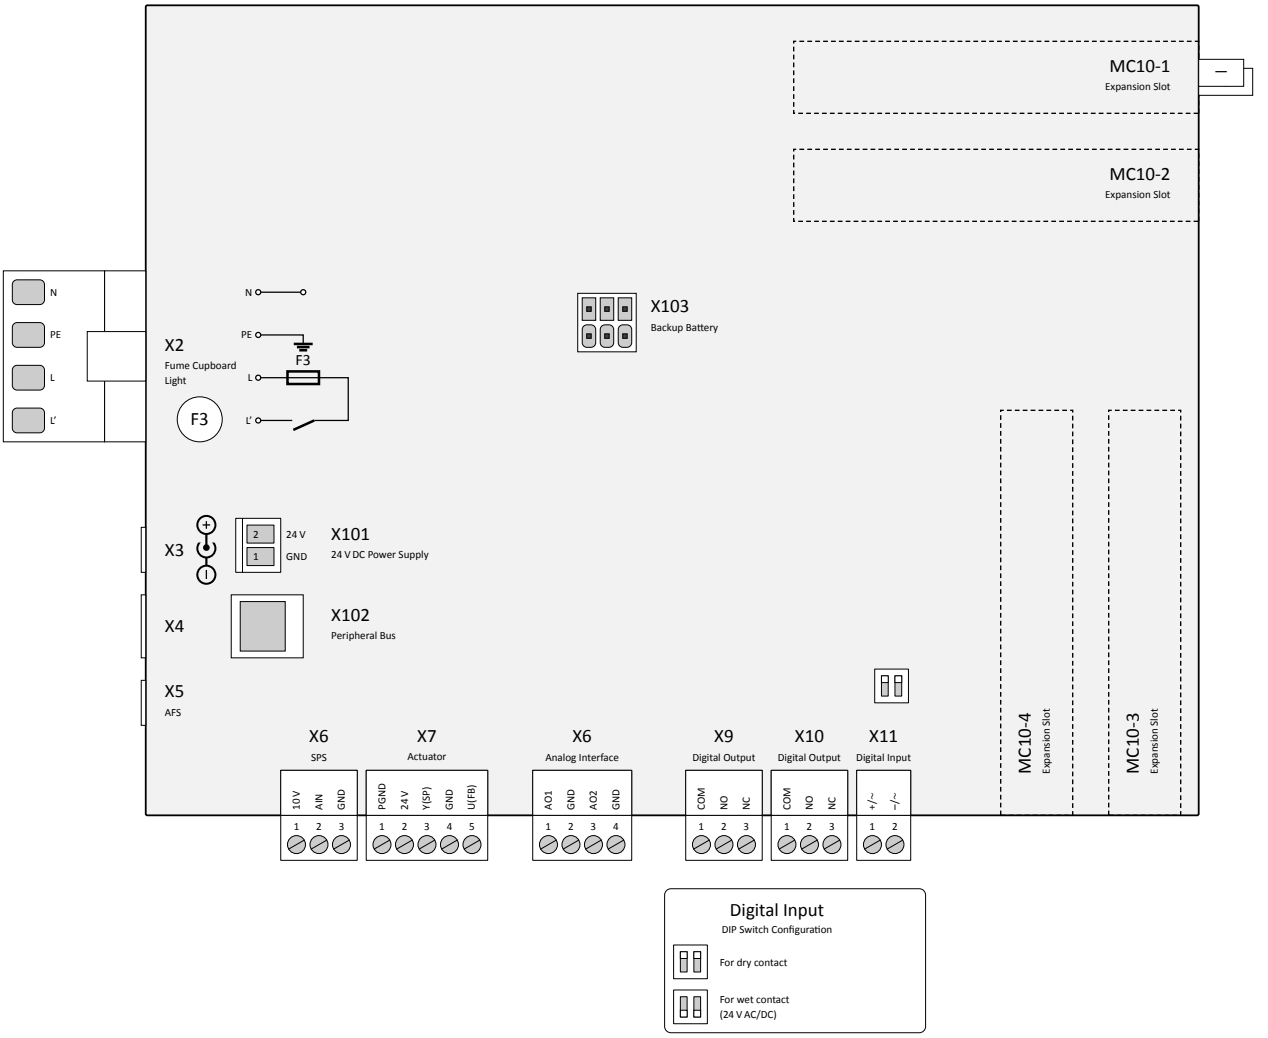
Terminal Diagram FC400A-EXT